


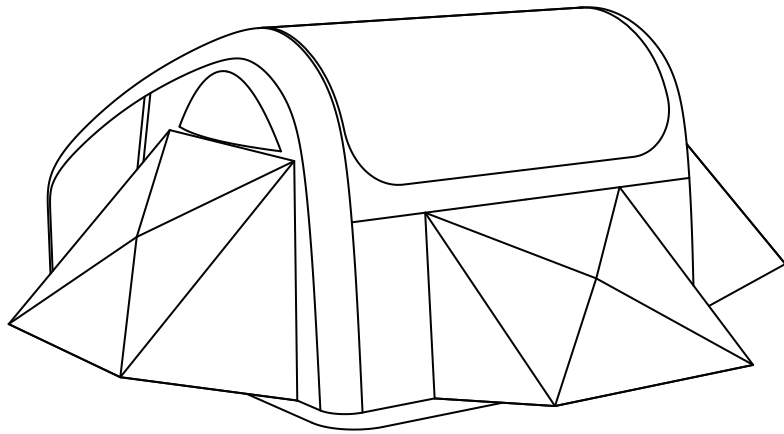

Island of Fish Roof Top Tent **User Manual**

Please read this user manual carefully before using the product.


Product Introduction

Island of Fish roof top tent is a multifunctional portable roof top tent, it lightweight, compact and easy to store. The tent body is designed with inflatable air column and comes with an inflatable/inspiratory air pump. The tent is aesthetically designed, wind-resistant, spacious and comfortable inside.

Island of Fish roof tent, safe, practical, economical. Serving as a product that can strengthen family bonds. With the public's use and understanding of the roof top tent. Island of Fish will be one of the family travel must-have products in the future.

Product Information

Tent Dimensions	220cm*160cm*136cm
Tent Material	200g Polyester-Cotton Fabric, water pressure resistance 400+
Rainproof Cover Material	300D Oxford Fabric, with black coating, water pressure resistance 3000+
Air Mattress Dimensions	220cm*160cm*15cm
Carry Bag Material	1000D Oxford Fabric, water pressure resistance 3000+
Carry Bag Dimensions	95cm*45cm*50cm
Air Column Diameter	10cm
Ladder	70-230cm one-touch aluminum telescopic ladder
Total Weight	36kg

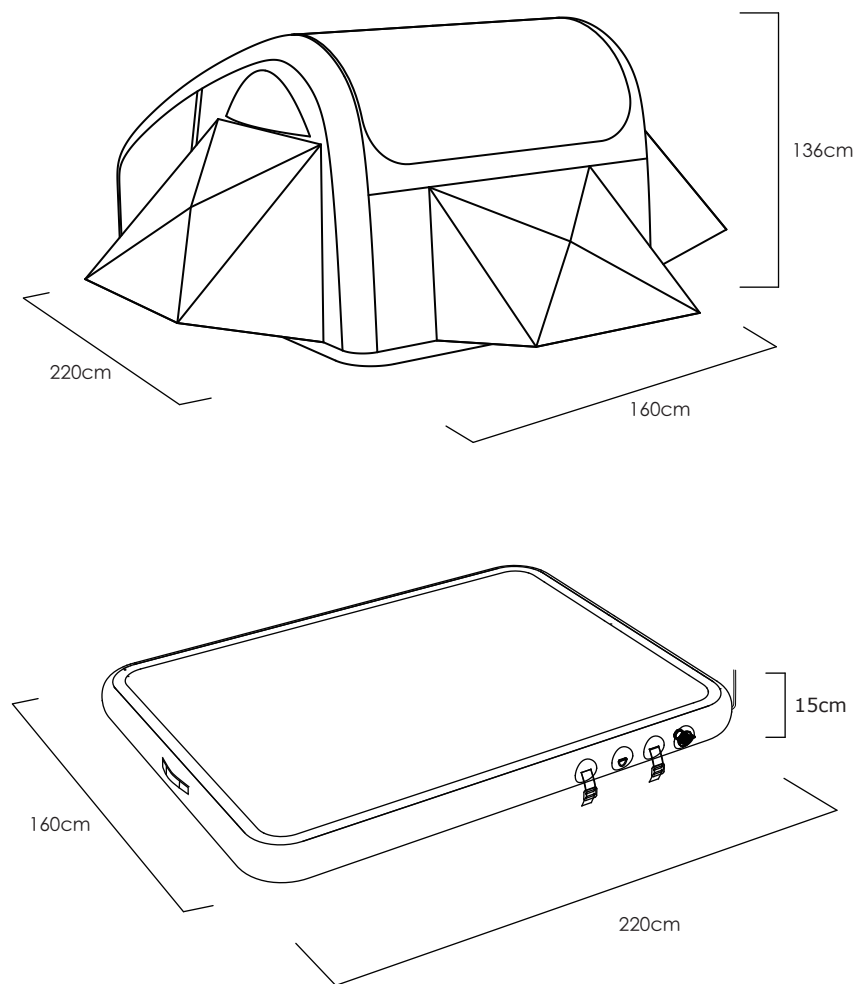


What's Included?


Name	Quantities
Tent Body	1
Air Mattress	1
230cm one-touch aluminum telescopic ladder	1
Double Action Hand Pump (inflate/deflate)	1
Repair Kit	1
Accessory Kit	1
Shoes Bag	1
Install Straps	4
Storage Bag	1
Oars (Optional)	2
90°/180°/270°Awning (Optional)	1
Electric Automatic Air Pump (Optional)	1
User Manual	1

Product Guide


- 1 A pair of roof bars/ roof rack with at least capacity of 300KG should be pre-installed on roof of vehicles

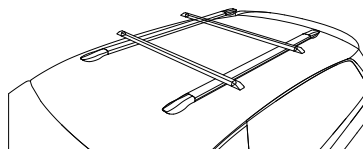


- 2 Open the storage bag.

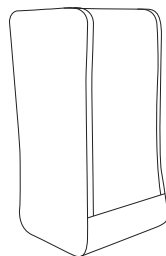


- 3 Take out all accessories.

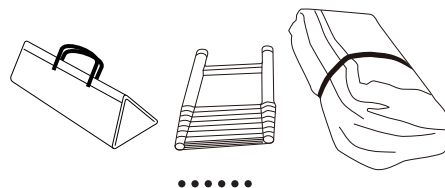

- 4 Lay the air mattress flat and unzip the rain cover.

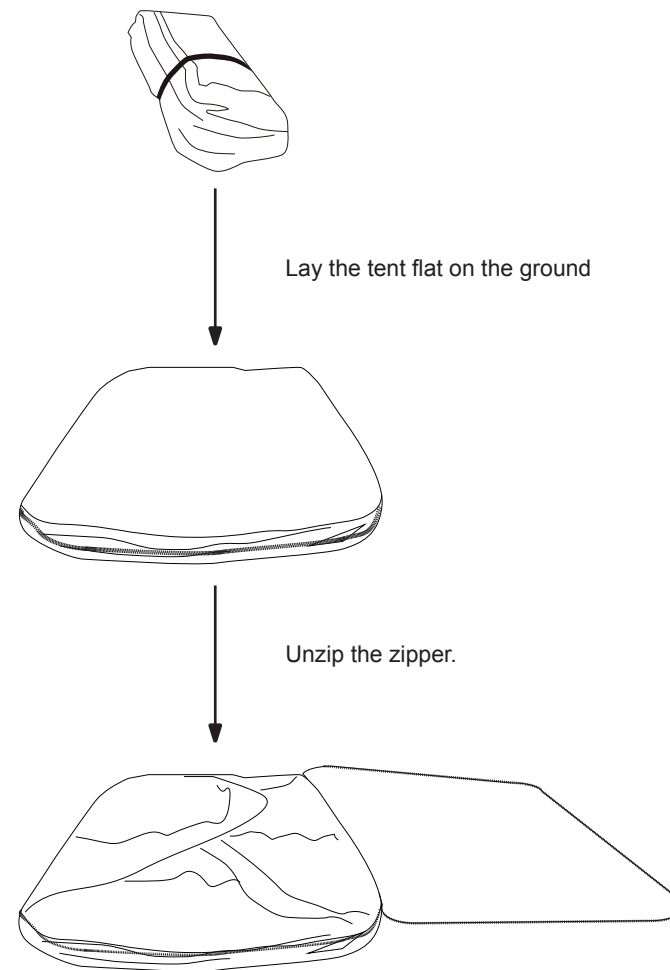



5 Air Mattress and Air Column Inflating

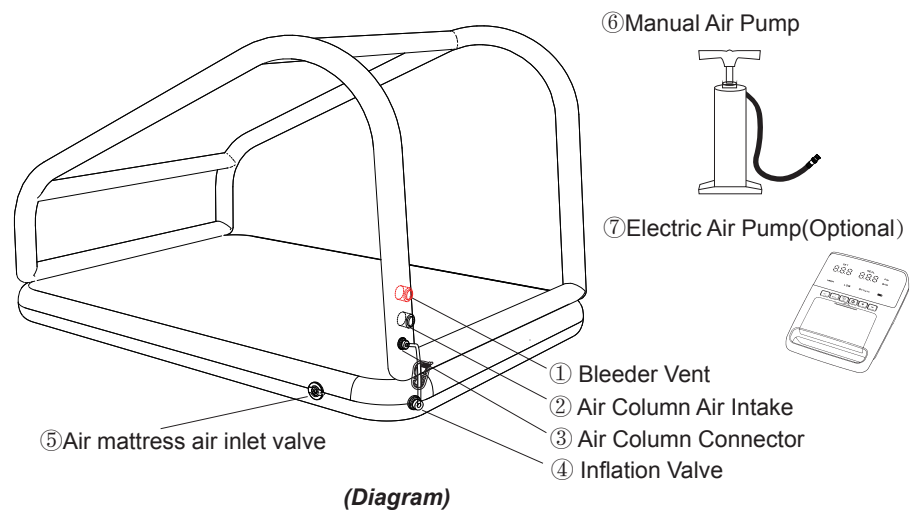


- Close the *inflation valve*④ (turn clockwise) on the corner of the air mattress.




- Find the air mattress *air inlet valve*⑤ on the side of the air mattress, open it, connect the manual air pump(electric air pump) to the *air inlet valve*⑤, and start inflating.

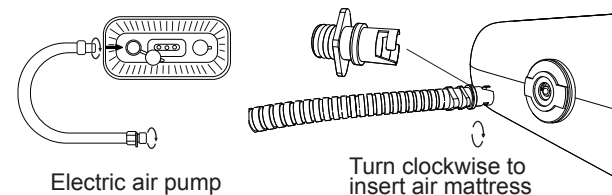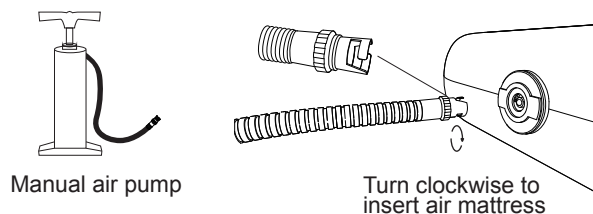

- When the pressure gauge of the manual air pump(electric air pump) reaches 15psi, the air mattress will be fully inflated. Then disconnect the air pump (electric air pump) .
- Turn on the *inflation valve*④(turn counterclockwise) and open the *air column connector*③(press to open) between the air mattress and the air column, then the air column will automatically inflate.

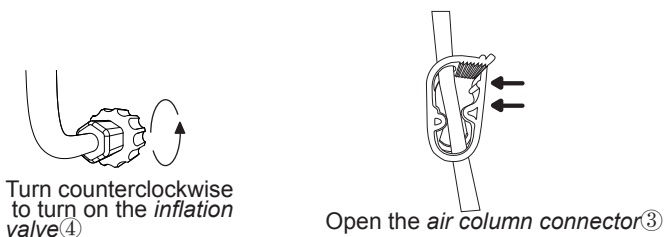

- Observe that the inflatable column becomes full and hard, or turn off the connection switch when the red *bleeder vent*① of the column begin to deflate.
- After the air column is fully deployed, close the *inflation valve*④(turn clockwise) and the *air column connector*③ to the fourth buckle.

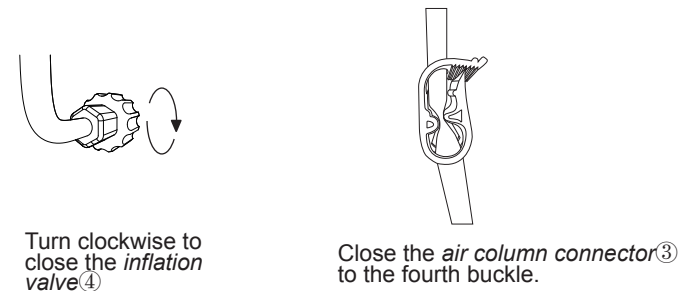

Other Inflation Method : Air Mattress and Air Column Inflated Together



First ensure that the *inflation valve*④ and *air column connector*③ are on! When the pressure gauge of the manual air pump (electric air pump) reaches 8psi, the air column will be full of air and then turn off the the *inflation valve*④ and *air column connector*③!

- Find the air mattress *air intake valve*⑤ on the side of the air mattress and open it. Connect the manual or electric air pump to this valve. Start inflating while also opening the *inflation valve*④ and *air column connector*③ between the air mattress and the air column to fill the entire tent. Once the pressure gauge on the pump reads 8psi, close the *inflation valve*④ and *air column connector*③ between the air mattress and the air column and then keep inflating the air mattress until the pump's pressure gauge reaches 12psi.

Other Inflation Method: Air Mattress and Air Column Inflated Separately



First ensure that the *inflation valve*④ and *air column connector*③ are closed!


● Air Mattress Inflated

1. Find the *air mattress air intake valve*⑤, open it, connect the manual air pump (electric air pump) to the air inlet valve, and start inflating. When the pressure gauge of the manual air pump (electric air pump) reaches 12psi, the air mattress will be fully inflated. then close the *air mattress air intake valve*⑤. (If this tent is used on the ground, the pressure of air mattress can be inflated to 2-3psi)



● Air Column Inflated

1. Find the *air column air intake valve*② located on the air column of the tent, open it, connect the manual air pump (electric air pump) to the air inlet valve, and start inflating until the pointer of the air pressure gauge of the manual air pump (electric air pump) reaches 8 psi.
2. If the air column of the tent cannot be propped up normally, please check the red *bleeder vent*① above the *air column air intake*②. When the air column pressure has not reached 8psi and the tent has not been set up well, but the red *bleeder vent*① begins to deflate, please open the cover of the *bleeder vent*① and turn the black knob inside clockwise until the air column pressure inflated to 8psi.


- 6 Install the foldable door and window awning on the correct position, secure it using zippers and Velcro, and then support it with a support poles.

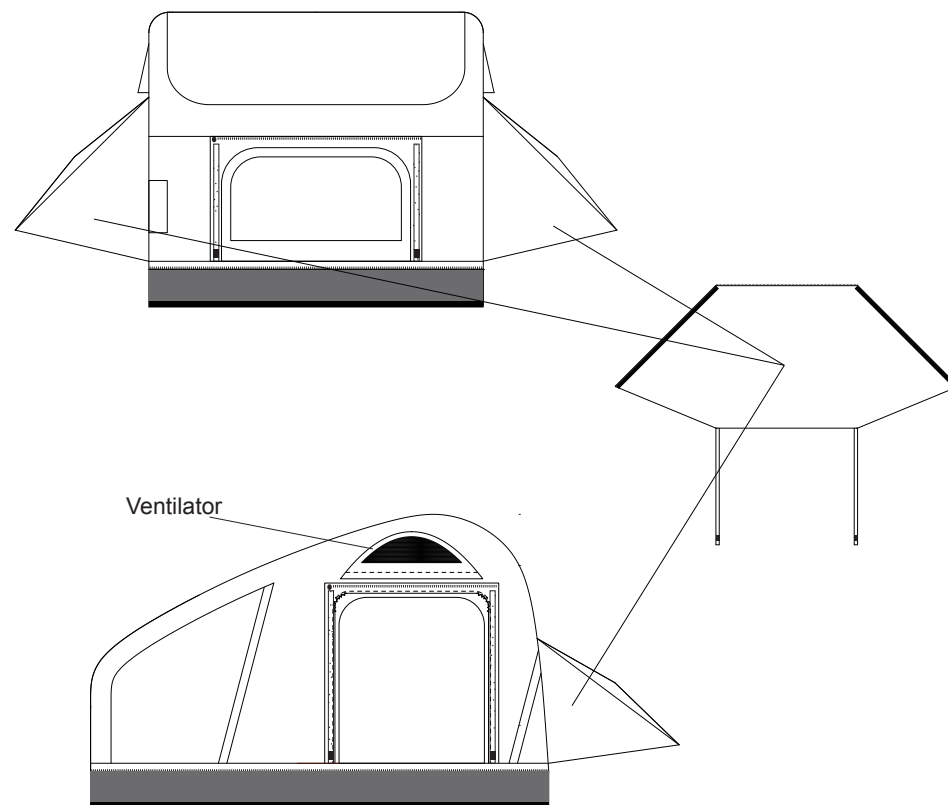


- 7 Adjust the position of the air-filled tent and fix it to the roof rack.

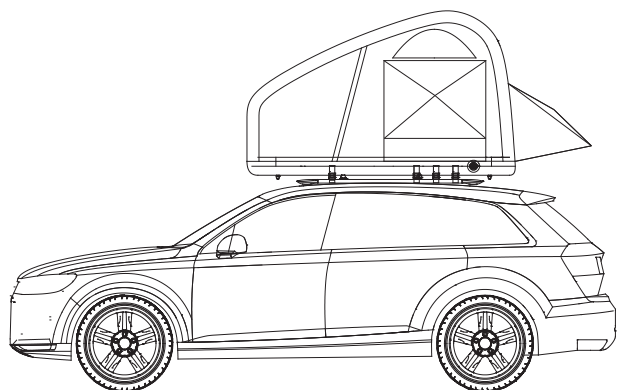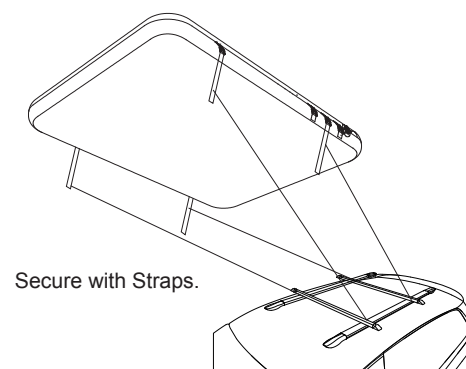

- 8 The straps go through the D-ring on the air mattress and secure it to the car wheels.

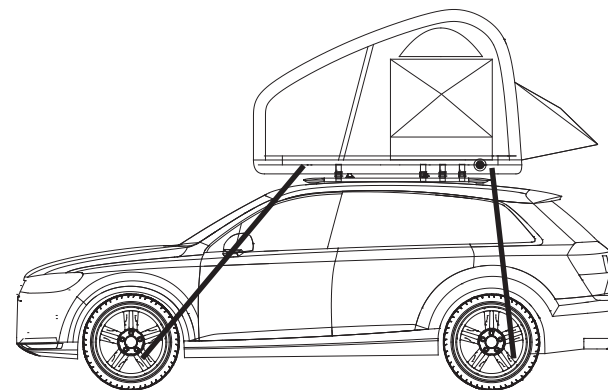

- 9 Secure the ladder through the straps and pack the shoe bag.

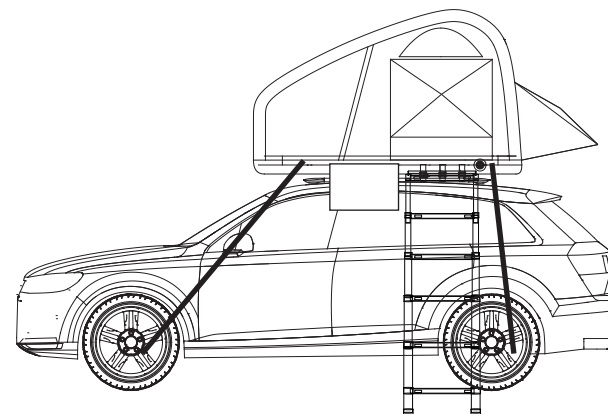

10 Completion of Installation



Storage Process

- 1 Remove straps and ladder
- 2 Open the tent air column valve to deflate
- 3 Remove the straps from the roof rack
- 4 Take down the tent
- 5 Zip up the rain cover
- 6 Open the bleeder vent of the air mattress to deflate
- 7 Tidy up the deflated tent
- 8 Fold Neatly
- 9 Put in storage bag

If you are traveling a short distance, you can only deflate the tent air column, zip up the rain cover, secure the air mattress and luggage pole with long straps, and then drive normally (speed less than 100km/h).



Warning

1. The roof of the car is pre-installed with a roof rack bearing 300kg.
2. Do not enter until the tent is fully raised.
3. Follow the instructions to open/pack the tent.
4. After setting up the tent, fix each part of the installation firmly, and ensure that the binding buckle is in a tight state to prevent falling.
5. Before traveling, open the tent to check whether the tent function is good condition and whether the accessories are complete.
6. Choose open, safe area as camping site. Do not use the Island of Fish roof top tent thunder storm, hurricane weather.
7. It is forbidden to play and jump in the tent, and it is not appropriate to sit on the edge of the tent.
8. Flames, gas or other burning appliances is prohibited in the tent.
9. Do not use sharp objects to prick the tent to avoid damage.
10. It is forbidden to sit or lie on the inflatable pipe. Please Check whether the tent pipe is wrapped before use. If the position of the inflatable pipe changes, it should be adjusted to the normal position before use.
11. After testing, this product can be used normally at -20 - +40°C. If it is used outside the above temperature range, please be careful. If there is damage, it is not covered by the warranty.
12. The tent body wind rope should be used to secure the tent in Level 5 windy weather. However, it is not recommended to use the Island of Fish roof top tent in conditions with six or more levels of wind.
13. The vents above the doors on both sides of the tent and at the bottom of the large skylight must be opened using small support poles during sleep in order to ensure continuous air circulation and prevent suffocation.

Maintenance

1. Keep flammable materials away from the tent.
2. Regularly inspect all parts of the tent to ensure they are intact.
3. Adhere to interior warning labels for proper care of the tent's interiors.
4. After each use of the Island of Fish roof top tent, make sure it is thoroughly dried before storage to prevent mildew, staining, discoloration, or fading of the tarpaulin and components.

5. If you won't be using the car roof tent for an extended period, store it in a dry, cool, and well-ventilated place.
6. Avoid overloading when using the Island of Fish roof top tent.
7. Use accessories:
 - A) Ladder: Follow safety instructions provided on the ladder label.
 - B) Pump: When inflating or deflating, pay attention to correct usage.

Tips

The Island of Fish roof top tent is small in size and easy to transport and store. This product has a set of roof bars that can be optional. This product can be entered and exited home elevator freely. This product can be used for entertainment in calm and safe shallow waters. During use, please pay attention to water safety protection measures (you must wear a life jacket and keep the tent balanced when playing in the water and the load-bearing capacity should not exceed 300kg).

Island of Fish Roof Top Tent